

# Handheld Ultrasonic Food Cutter

(JYD-2801Q)

## User Manual

01. Overview
02. Main specification
03. Front control panel function and operation manual
04. Precautions for use
05. Scope of warranty

SHEZHEN JIAYUANDA TECHNOLOGY CO.,LTD

## 01.Overview

Shenzhen Jiayuanda Technology Co., Ltd is a leading ultrasonic technology development of high-tech enterprises since 2008. We have a professional group provide a wide range of ultrasonic solutions.

Main features of the hand-held food cutter:



it adopts the latest ultrasonic technology, with easy operation, stable ultrasonic effect. When cutting the bakery product, the knife is not sticky, the food surface is smooth and will not left chip. The cutter can save both time and labor. Some parts of the blades are made of food grade material, the user can use it safely.



## 02.Main specification

|                      |  |
|----------------------|--|
| Model                | JYD-2801Q                                |
| Max ultrasonic power | 50W                                      |
| Power control        | Three power switchable                   |
| Working frequency    | 28±1KHz                                  |
| Working current      | 0.2-0.35A                                |
| Work power           | 220V±10% 50Hz/60Hz<br>110V±10% 50Hz/60Hz |
| Temperature          | 0-40°C                                   |

### 03.Front panel function and operation manual

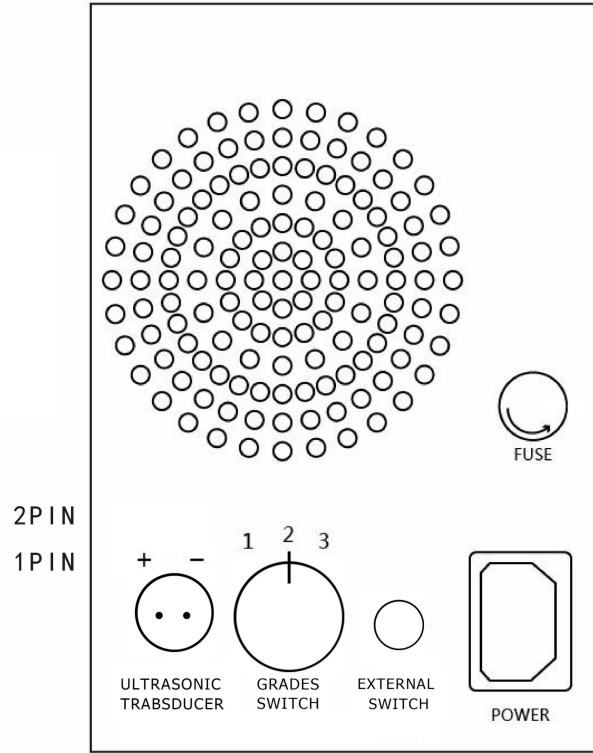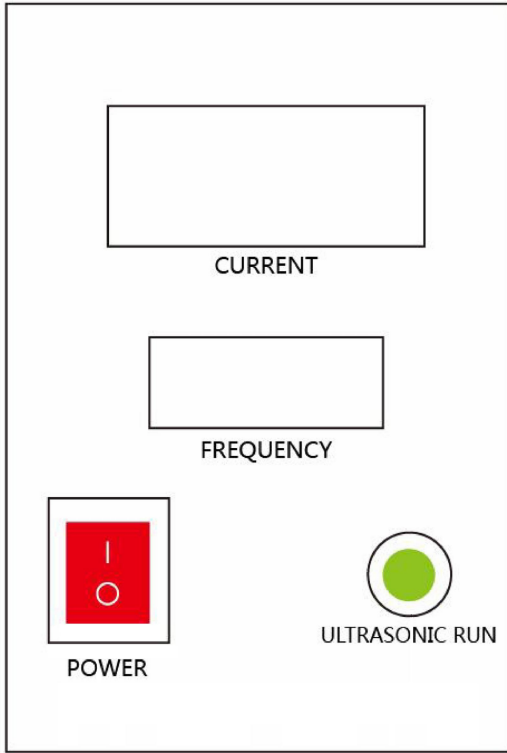

In the connection, please tighten the navigation control insert nut, so that the connection is reliable!



## 04. Precautions for use

- 1).Cut different product, please adjust to different power gear.
- 2).Continuous work after 15 minutes, stop using for 5 minutes to let the blade cool down.
- 3).If there was a long time of the noise sound when using, please reduce power gear.
- 4).When cutter surface has much sticky chip, please stop, use wet cloth to wipe clean, then use again
- 5).Ultrasonic cutting knife can't collide with hard objects or metal, please avoid the damage of the blade.
- 6).When the ultrasonic opens, please do not touch the blade.



## 05. Scope of warranty

- 1).Ultrasonic generator and transducer under normal use, one year warranty.
- 2).Blade under normal use, the warranty for a month, the blade deformation or damage is not within the warranty.

Company contact:

Add:5 F, E building, Yujianfeng Industrial Area, Huafan road no. 289, Dalang, Longhua,  
Shenzhen, CN

Tel: 0755-28177180

Web: [www.jydultrasonic.com](http://www.jydultrasonic.com)